

Converting LVDT to IA

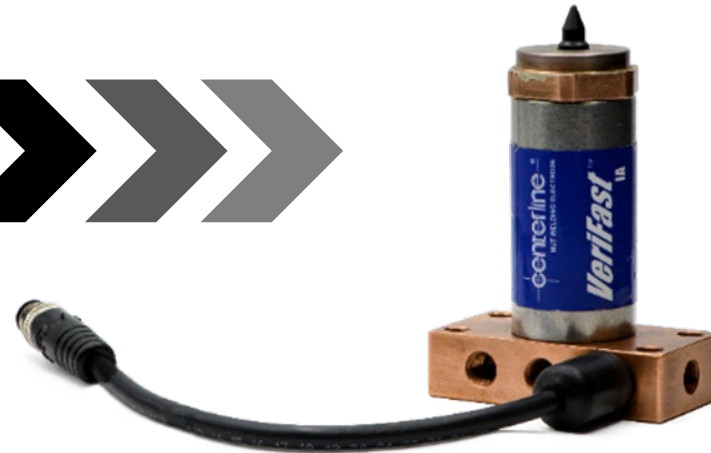


Table of Contents

▪ VeriFast IAdapt Module	4
▪ Converting from LVDT to IA: FlexFast	5
▪ Converting from LVDT to IA: User Installed	6
▪ Converting from LVDT to IA: NetLink	7
▪ Microview	8

VeriFast Integrated Amplifier

Why Migrate to IA?

- **Enhanced Design.** VeriFast™ IA boasts design improvements that lead to reduced integration time and easier maintenance. Featuring sturdier construction, thicker coil wires, soldered connector, and low pressure molded.
- **Identical Mechanical Dimensions.** VeriFast™ IA weld bodies maintain the same mechanical dimensions as LVDT weld bodies, ensuring seamless compatibility.
- **Reduced Installation Time.** The Integrated Amplifier simplifies the setup and integration process, reducing installation time. They can be wired directly to analog field blocks.
- **No Calibration.** Pre-calibrated and preset coils eliminate the need for calibration. VeriFast™ IA weld bodies come with an integrated analog amplifier, eliminating the need for a separate signal conditioner. Calibration is not required.
- **Improved Support.** VeriFast™ IA's design leads to easier troubleshooting, reducing downtime and support-related challenges.
- **Reduce Operational Costs.** VeriFast™ IA's enhanced design and pin cost improvements provide long-term cost savings. Similar pricing per point as LVDT, with a seamlessly crimped core, resulting in a cost reduction of \$40 CAD/pin.
- **IA MicroView.** New versions are available for seamless integration with IA weld bodies.
- **Dedicated and Interchangeable Weld Bodies.** VeriFast™ IA offers dedicated and interchangeable weld bodies to cater to different welding needs. All current weld body styles are accessible and serve as straightforward replacements for LVDT weld bodies.

Converting from LVDT to IA

VeriFast IAdapt Module

The VeriFast IAdapt Module is designed to *replace* the Signal Conditioner when converting existing machinery from LVDT to IA weld bodies. This module facilitates pass-through connections, eliminating the requirement for rewiring the control panel. The IAdapt becomes essential only in cases of LVDT to IA conversion where the customer prefers to avoid rewiring. To complete the process, simply disconnect the four colored Signal Conditioner terminals, uninstall the Signal Conditioner, install the IAdapt module, and then reattach the four terminals. This method of reusing the existing terminals not only saves time but also helps prevent wiring errors during the conversion.

- **No re-wiring necessary.** Unplug the 4 connectors from the Signal Conditioner, remove it, install the IAdapt and re-connect the 4 connectors.
- **PLC programming is not required.** Weld pin positions will need to be retaught, and maybe tolerance windows adjusted.
- **Physically change the LVDT weld body with the IA body**, which connects to the existing wiring.

Please visit our website. Products/VeriFast IA/LVDT weld body user manuals
<https://www.cntrline.com/products/verifast-ia>



IAdapt Module
617-07160

IA and LVDT weld bodies cannot be mixed on FlexFast machines. Contact CenterLine for evaluation of your FF Machine

Converting from LVDT to IA


FlexFast

Two options exist for converting a FlexFast from LVDT to IA: (Plus changing the weld bodies)

- a) **Replace** the QBridge FF with a QBridge Analog. This also requires changing the cable from the QBridge to the machine and re-wiring the panel end. This prevents the fixture from being confused with an LVDT fixture, (if used in multiple machines.) This only works if ALL LVDT's on the FlexFast are being replaced.
- b) **Add** a QBridge Analog (614-61573) block and wire in a separate cable. This allows the use of both the LVDT fixtures with one Harting connector, and the IA fixtures with a different Harting connector.



IAAdapt Module
617-07160

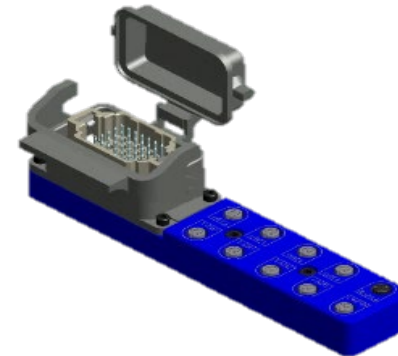

QBridge Analog
614-61573

Converting from LVDT to IA

User Installed

Two options exist for converting a User Installed LVDT to IA: (Plus changing the weld bodies)

- a) **Replace** the Signal Conditioners with IAdapt modules. (617-07160) This allows the wiring to remain the same.
- b) **Replace** or re-do the wiring. LVDT's are wired to the Signal Conditioner and the analog signal leaves the signal conditioner and goes to the analog card. The IA signal goes directly to the card, and sometimes the original wires will not reach. Up to the user how to address this.



**IAdapt Module
617-07160**

Converting from LVDT to IA

NetLink

Two options exist for converting an LVDT to IA when using NetLink: (Plus changing the weld bodies)

- a) **Replace** the Signal Conditioners with IAdapt modules. (617-07160) This allows the wiring to remain the same.
- b) **Rewire** the IA body directly to the field block. Two options also exist for this.
 - i. Use an analog input on a field block. A cross over cable may be necessary. (617-02129) This is dependent on the type of field block used
 - ii. Use I/O Link on a Balluff field block. This requires using a Balluff I/O Link Interface (614-51718) and a cross over cable. (617-02129)



**IAdapt Module
617-07160**



Converting from LVDT to IA

MicroView

If using MicroView, replacement is the only option for converting from LVDT to IA.
(Plus changing the weld bodies)

There are 6 versions of MicroView that are compatible with IA. See chart below.
When replacing the MicroView, all wiring can remain.



LVDT Version		Equivalent IA Version		
Smart Number	3 x 5 Part Number	Smart Number	3 x 5 Part Number	
V1 = Hard wired	VFMV-V1-A-A	420-70823	VFMV-V1-D-D	420-77699
V2 = Connectorized	VFMV-V1-A-B	420-70824	VFMV-V1-D-B	420-77700
	VFMV-V1-A-C	420-70825	VFMV-V1-D-C	420-77702
A = LVDT	VFMV-V1-D-S*	420-72321	VFMV-V2-D-B	420-77704
B = LPT	VFMV-V2-A-A	420-73061	VFMV-V2-D-D	420-77703
C = Analog	VFMV-V2-A-B	420-73062	VFMV-V2-D-B	420-77704
D = IA	VFMV-V2-A-C	420-73063	VFMV-V2-D-C	420-77705

* GM specific version



CENTERLINE (WINDSOR) LIMITED
CENTERED ON SOLUTIONS

CONTACT US

www.cntrline.com



415 Morton Dr.
Windsor ON
N9J 3T8



Telephone:
+1 519-734-8464
Fax:
+1 519-734-2000



E-mail:
info@cntrline.com



Platinum member